

CONTENTS

Operation	File name
OPERATING THROUGH REPEATERS REPEATER ACCESS 1 TRANSMITTING A 1750 HZ TONE 2 REVERSE FUNCTION..... 3 AUTOMATIC SIMPLEX CHECKER (ASC) 3 TONE FREQUENCY ID 3	01-REPEATER-E.pdf
MEMORY CHANNELS SIMPLEX & REPEATER OR ODD-SPLIT MEMORY CHANNEL? 1 STORING SIMPLEX AND STANDARD REPEATER FREQUENCIES..... 1 STORING ODD-SPLIT REPEATER FREQUENCIES 2 RECALLING A MEMORY CHANNEL 2 CLEARING A MEMORY CHANNEL 2 NAMING A MEMORY CHANNEL 3 MEMORY-TO-VFO TRANSFER..... 3 CHANNEL DISPLAY FUNCTION 3	02-MEMORY CHANNEL-E.pdf
PROGRAMMABLE MEMORY (PM) APPLICATION EXAMPLES 1 STORING DATA IN PM CHANNELS..... 2 RECALLING PM CHANNELS 2 AUTO PM CHANNEL STORE 2 PM CHANNEL RESET 2	03-PM CHANNEL-E.pdf
SCAN SELECTING A SCAN RESUME METHOD..... 1 VFO SCAN 1 MEMORY SCAN 2 GROUP SCAN 2 PROGRAM SCAN..... 3 MHZ SCAN..... 3 CALL SCAN 3 VISUAL SCAN..... 4	04-SCAN-E.pdf
CONTINUOUS TONE CODED SQUELCH SYSTEM (CTCSS) USING CTCSS..... 1 CTCSS FREQUENCY ID 2	05-CTCSS-E.pdf
DIGITAL CODED SQUELCH (DCS) USING DCS 1 DCS CODE ID..... 1	06-DCS-E.pdf
DUAL TONE MULTI-FREQUENCY (DTMF) MANUAL DIALING 1 AUTOMATIC DIALER 1 DTMF KEY LOCK 2	07-DTMF-E.pdf
EchoLink® WHAT IS ECHOLINK? 1 SETTING UP ECHOLINK SYSOP MODE 1 STORING ECHOLINK MEMORY 2	08-EchoLink-E.pdf

Operation	File name
OTHER OPERATIONS	09-OTHER OPERATIONS-E.pdf
POWER ON MESSAGE.....1	
DISPLAY ILLUMINATION1	
KEY LOCK1	
KEY BEEP.....2	
EXTERNAL SPEAKER CONFIGURATION2	
PROGRAMMABLE VFO2	
CHANGING THE FREQUENCY STEP SIZE.....3	
PROGRAMMABLE FUNCTION KEYS3	
FREQUENCY DIRECT ENTRY3	
AUTOMATIC POWER OFF (APO)4	
SWITCHING FM/AM MODE4	
ADVANCED INTERCEPT POINT (AIP).....4	
S-METER SQUELCH.....4	
SPEAKER MUTE5	
BEAT SHIFT.....5	
SELECTING AN OUTPUT POWER.....5	
TIME-OUT TIMER (TOT)5	
MASKING A BAND5	
DISPLAY PARTITION BAR.....6	
POWER ON PASSWORD6	
PACKET OPERATION	10-PACKET-E.pdf
PACKET MODE1	
DATA BAND.....2	
COM PORT SPEED.....2	
USING EXTERNAL TNC.....2	
TNC COMMANDS LIST3	

Operation	File name
APRS®	11-APRS-E.pdf
CONNECTING WITH A GPS RECEIVER OR WEATHER STATION.....2	
ADJUSTING THE INTERNAL CLOCK.....2	
RECEIVING APRS DATA3	
ACCESSING RECEIVED APRS DATA3	
DISPLAY EXAMPLE4	
SORT FUNCTION.....5	
FILTER FUNCTION5	
RECEIVING A MESSAGE6	
ENTERING A MESSAGE.....6	
ACCESSING RECEIVED APRS MESSAGES7	
TRANSMITTING A MESSAGE7	
BASIC SETTING8	
SETTING INTERNAL TNC.....8	
SETTING GPS PORT8	
SETTING WAY POINT.....9	
PC PORT ON/OFF9	
PROGRAMMING POSITION DATA.....9	
SETTING BEACON INFORMATION9	
SELECTING A POSITION COMMENT10	
STORING STATUS TEXT.....10	
SETTING PACKET FILTER10	
SELECTING YOUR STATION ICON11	
SETTING BEACON TX ALGORITHM.....11	
PROGRAMMING A PACKET PATH12	
NETWORK.....13	
VOICE ALERT.....13	
WEATHER STATION DATA OUTPUT13	
SETTING AS A DIGIPEATER.....14	
STORING USER PHRASES.....14	
STORING AUTO MESSAGE REPLY15	
PROGRAMMING A MESSAGE GROUP CODE.....15	
SETTING SOUND.....15	
SETTING INTERRUPT DISPLAY16	
SELECTING A DISPLAY UNIT (1).....16	
SELECTING A DISPLAY UNIT (2).....16	
SELECTING A NAVITRA GROUP16	
STORING NAVITRA MESSAGE.....16	
PACKET MONITOR DISPLAY17	
DX PACKETCLUSTERS MONITOR.....17	
TROUBLESHOOTING18	
TRANSCEIVER RESET	12-RESET-E.pdf
KEY OPERATION1	
MENU MODE1	
VGS-1 (OPTIONAL) OPERATION	13-VGS-E.pdf
VOICE ANNOUNCEMENTS1	
VOICE RECORDER.....2	

Operation	File name
CROSS-BAND/ LOCKED-BAND OPERATION (K TYPE MODELS ONLY) REPEATER OPERATION MODE1 REPEATER TX HOLD1 REPEATER ID TX.....1	14-CROSS BAND (K TYPE)-E.pdf
WIRELESS OPERATION (K TYPE MODELS ONLY) REPARATION1 CONTROL OPERATION.....1	15-WIRELESS (K TYPE)-E.pdf
WEATHER ALERT (K TYPE MODELS ONLY) WEATHER ALERT ON/ OFF1	16-WEATHER ALERT (K TYPE)-E.pdf
SKY COMMAND II (K TYPE MODELS ONLY) CONNECTING THE TRANSPORTER WITH THE HF TRANSCEIVER1 PREPARATION FLOW2 PROGRAMMING CALL SIGNS2 PROGRAMMING A TONE FREQUENCY3 CONTROL OPERATION.....3	17-SKY COMMAND (K TYPE)-E.pdf